

Programming System Speed Dials

To enter a programming session, follow the next few simple steps:

- 1) Press FEATURE * * 2 6 6 3 4 4
- 2) Enter Password: 2 6 6 3 4 4

Display will read: "*Terminals & Sets*"

Using the navigation keys, as displayed below, follow the next simple steps:



- 3) Press: *NEXT*

Display will read: "**Lines**"

- 4) Press: *Next*

Display will read: "**Services**"

- 5) Press: *Next*

Display will read: "**System Speed Dial**"

- 7) Press: *Show*

Display will read: "**Speed dial #:__**"

Hint: Begin your System Speed Dials with "**01**"

Enter 01 or 02 or 03 etc.

Display will read: System Speed Dial #: **01**

8) Press: *Show*

Display will read: "**No number stored**"

9) Press the "**CHANGE**" softkey.

Display will read: "**#01:**"

10) Enter the Speed Dial number

Press the "**OK**" softkey.

11) Press: *NEXT*

Display will read: "**Use prime line**"

12) Press: *NEXT*

Display will read: "**Display digits:Y**"

13) Press: *NEXT*

Display will read: "**Bypass restr'n:N**"

14) Press: *NEXT*

Speed dial 01 has now been programmed:

To program another Speed Dial Number, repeat steps 6 thru 14.